EARISE

W2 | UHF Wireless Microphone

USER INSTRUCTION

www.eariseshop.com

WARRANTY

EARISE guarantees one and a half years warranty and 60 days hassle-free return. We provides lifetime technical support. Please reach us via **support@eariseshop.com**.

WARNING

1. When using this device, keep it away from water.
2. Use the device in a ventilated environment, keep it away from fire.
3. Since it's a wireless device, please keep it away from other interfering sources.
4. Don't take apart the device.
5. Please use the standard power supply, high voltage may damage the device.
6. Please place the used batteries into the recycle bin, don't litter them.

WHAT'S IN THE BOX

2 x W2 UHF Wireless Microphones
1 x Bluetooth Receiver
1 x USB Charging Cable
2 x Microphone Covers
1 x User Manual

MICROPHONE INSTRUCTION 01

RECEIVER INSTRUCTION 02

OPERATION GUIDE 03

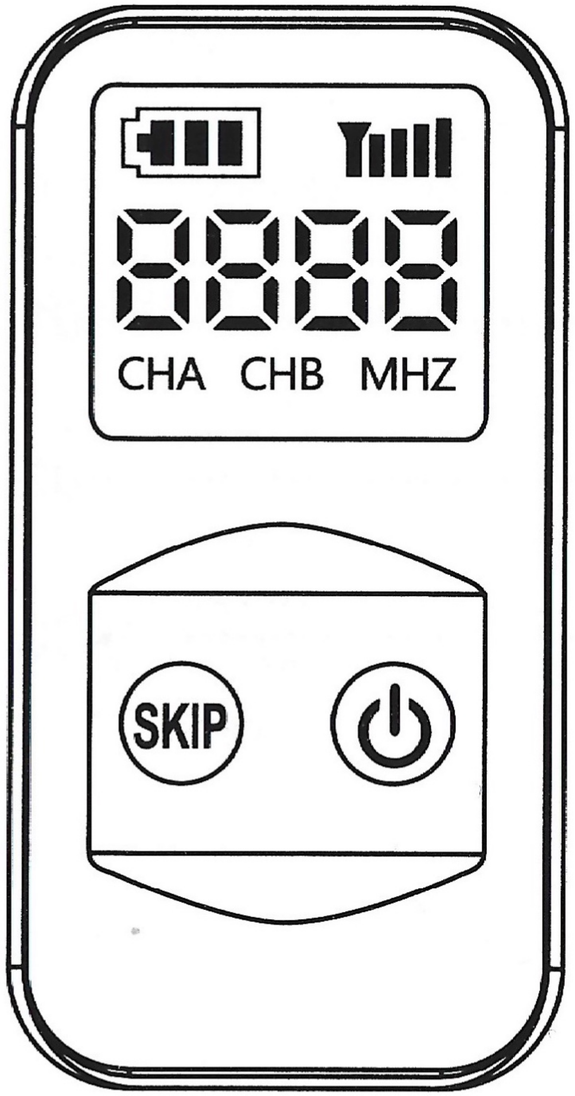

1. : The battery level of the microphone. Each microphone needs 2pcs AA batteries. (Not included)
2. : Signal strength.
3. 8888 : Display the current frequency.
4. (SKIP) : A channel (CHA) can be switched to the following frequency: 650MHz, 650.5MHz, 651MHz, 671.5MHz.....673.5 MHz (0.5MHz/frequency point, total 48 frequency); B channel (CHB) can be switched to the following frequency: 674MHz, 674.5MHz, 675MHz, 675.5MHz.....697.5 MHz (0.5MH / frequency point, total 48 frequency)
5. : Press the button to power on the microphone. Press and hold the button to power off the microphone.

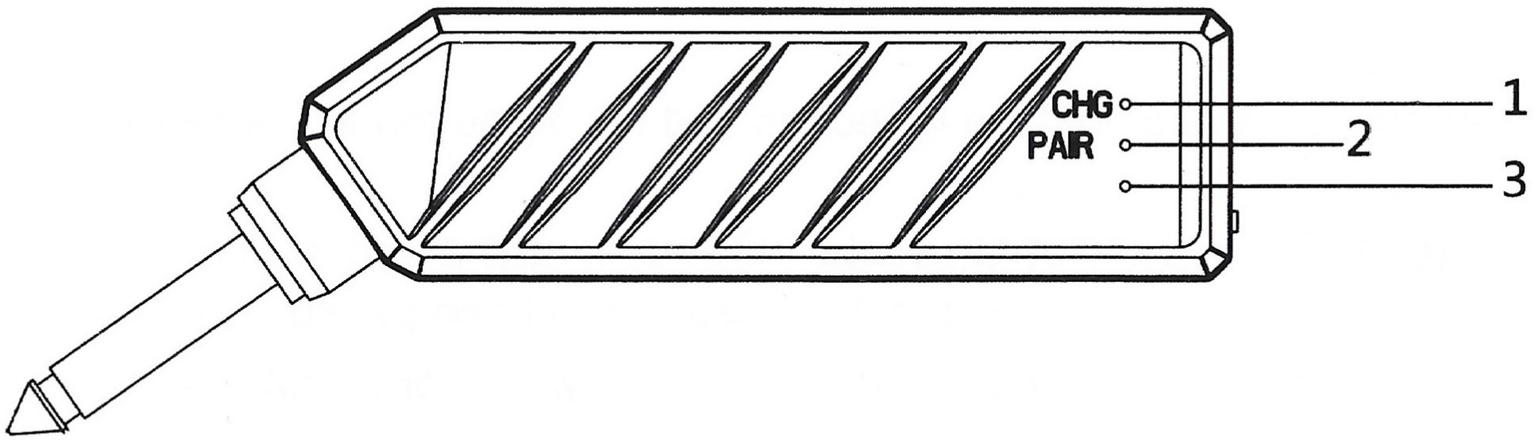

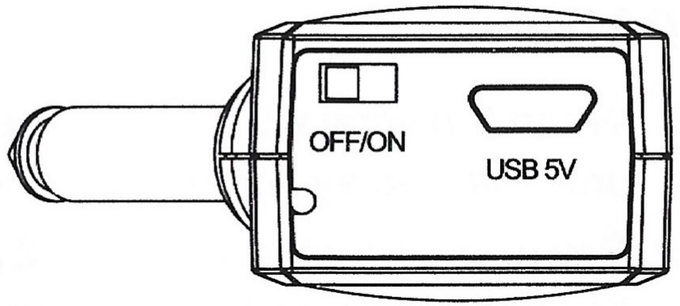

Light Indicator State	Power On	Power Off	Charging	Fully Charged	Pairing
LED 1 (CHG)	Keep in red	Off	Keep in blue	Off	Keep in red
LED 2 (PAIR)	Flash once in blue, then off	Off	Off	Off	Keep in blue if pair successfully with CHB
LED 3 (PAIR)	Flash once in blue, then off	Off	Off	Off	Keep in blue if pair successfully with CHA

PAIRING

1. When the wireless microphones are power off, press and hold the ⏻ button and the SKIP button at the same time until the display screen is flashing.
2. Power on the receiver, LED 2 and 3 will flash 3 times, and then press the SKIP button, LED 2 and 3 will stop flashing and keep in blue, which means the wireless microphones and the receiver has been paired successfully.
3. For the first time use, you need to pair the microphones following the above steps. It will automatically pair in the next use.

CHARGING

1. When the wireless microphone is in low power, the symbol 🔋 on the display screen will flash. Please replace 2pcs AA batteries for the microphone.
2. When the receiver is in low power, LED 2 and 3 on will flash. Please charge the receive withe the included USB charging cable.